

Addendum to TLT-12 Manual Rev091404

To hang both Laser Guns (TLT-36 & 37) on the discs of the TLT-41 Calibration Bar or TLT-28 Wheel Clamps. Place the laser gun on the disc at the “T” of the laser gun where there is a slot at the junction and secure them by gently pressing down on the laser gun. There should be a slight snap when the plunger locks into place on the disc. See images below:

